

How To Clean Your Vent Free Fireplace.

Step by Step Instructions




#1. You will need to get a can of compressed air with the straw attachment. You can buy this at any home improvement/office supply store.



#2. Remove all the logs.

Pilot Assembly

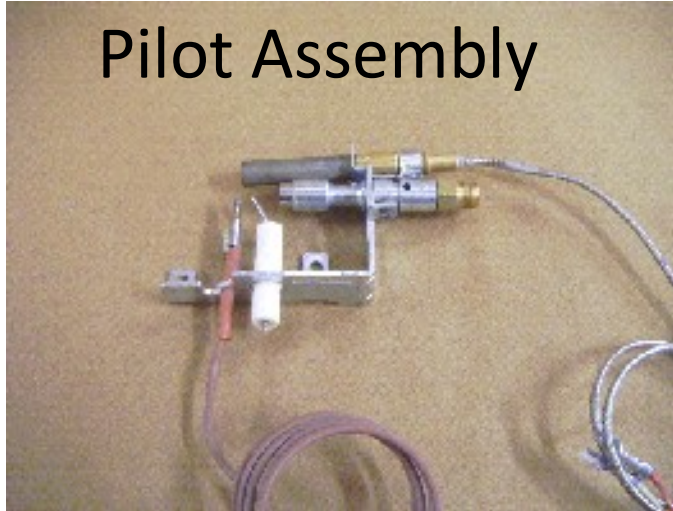

#3. Locate your pilot assembly.

Hearthsaver and
Chesapeake units



Pilot assembly is
located on the
left side.

Here are some examples of where the pilots
would be located based on the model you have.

Smartline, Charred
Timber(CTCL), and
the Vent Free Insert
(DIS)




The pilot is
located in the
back of the unit.



MOJO
LOGS



Pilot is located
in the back of
the unit.

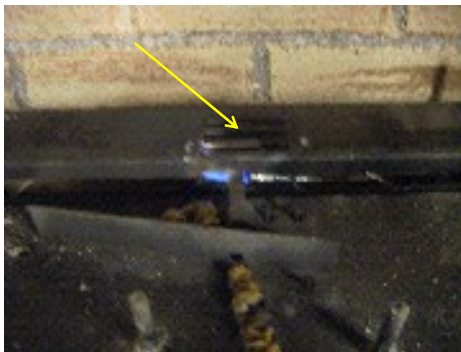

Aged
Hickory
(DEB)



The pilot is
located in
the back left
of the unit.



Berkley
Oak





Pilot is
located in
the back of
the unit.



Vent Free Stoves



The pilot is located in the back left corner of the unit.

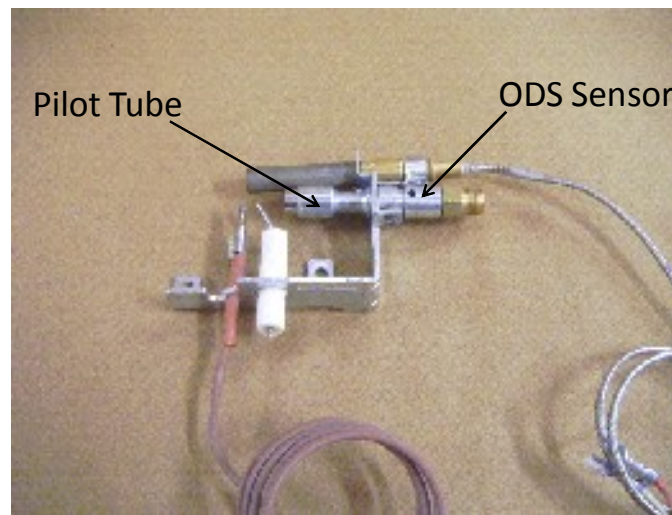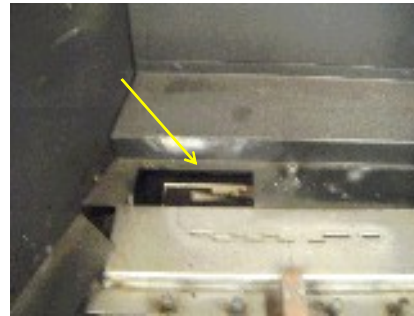

#4. Locate the ODS sensor on the pilot. This is the small hole that is located on the side of the pilot tube.



#5. Insert straw into the ODS sensor and squirt air through, to insure there is no dust in the pilot.

#6. Use a vacuum to suck up any other dust that may be in the fireplace.

#7. Put all the logs back to there specific spots and clean the dust off them prior to reinstalling them.

#8. Relight the pilot and turn the unit on.